

Siouxicide Choppers Custom Backrest

Warning


The rider's safety depends upon the correct installation of this kit. Use the appropriate service manual procedures. If the procedure is not within your capabilities or you do not have the correct tools, have a qualified person/shop perform the installation. Improper installation of this kit could result in death or serious injury.

Separate purchase of other parts or accessories are required for proper installation of this kit on certain model motorcycles. See the P&A retail catalog or the parts and accessories section for a list of required parts or accessories for a specific model.

Loctite 262 Threadlocker and sealant- Red and Loctite 243 medium strength Threadlocker and sealant- Blue are required for proper installation of this kit.

Installation Instructions

1. Ensure the width of the backrest fits snug in docking hardware, as ours is less flexible than a stock one.

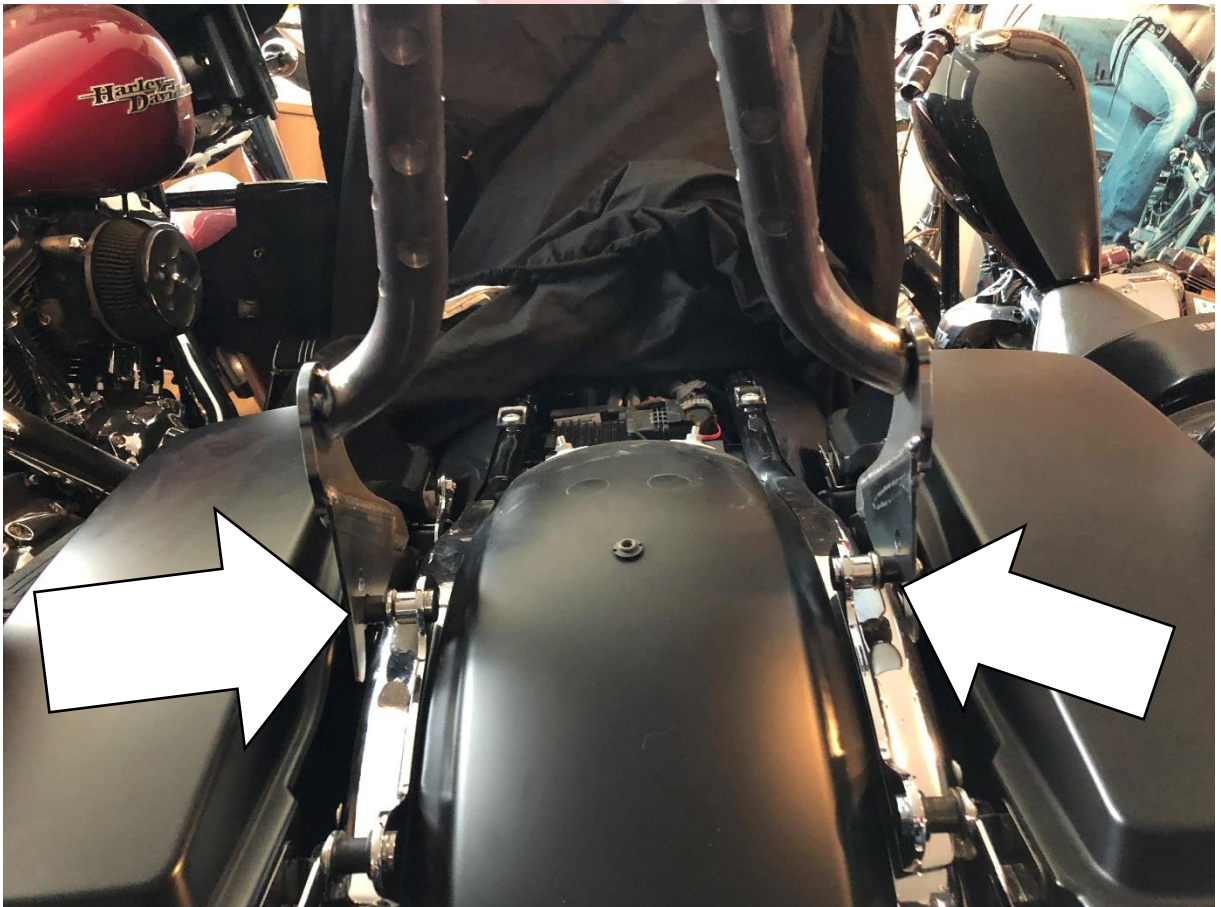

Siouxicide Choppers Custom Backrest

2. If fitment is not correct insert washers that came with the Custom Backrest here.



Siouxicide Choppers Custom Backrest

3. Once you ensure you have proper fitment loosen the 3 bolts on the docking hardware (Picture below).



4. Clamp the quick detach tabs on the Custom Backrest to install in in the docking hardware.
5. Once quick detach tabs click in docking hardware tighten docking hardware back up.

